

Technical Journal

TITLE:

Engine 62: High oil consumption

REF NO: TJ 29871	ISSUING DEPARTMENT: Technical Service		CAR MARKET: States and C	
3 US 7510 V	YEAR	ISSUE DATE:	DAY	
FUNC GROUP: FUNC DESC:		2015	02	05
2100	2100 Engine		Page 1 of 14	

"Right first time in Time"

Attachment

File Name	File Size
Attachment TJ 29871.pdf	2.5818 MB
Oil specifications US MY12 150122.pdf	0.0597 MB

Vehicle Type

Туре	Eng	Eng Desc	Sales	Body	Gear	Steer	Model Year	Plant	Chassis range	Struc Week Range
134	62	B5254T5					2012-2012	22	0017819-0170117	201046-201219

CSC Customer Symptom Codes

Code	Description
AZ	Lubrication and oil system/Excessive oil consumption

VST Operation Number

VST Operation Number	Description
98547-2	Piston ring replacement

DTC Diagnostic Trouble Codes

Technical Journal 29871



Text

DESCRIPTION:

Customer may experience "Low oil pressure light" coming on. No external leakage. High engine oil consumption may occur.

PRODUCT MODIFICATION:

This engine type was replaced by engine 61 on MY 2013.

VEHICLE REPORT:

Please follow the general TIE Reporting guidelines available in the TIE system under "Instructions". If the symptom is not remedied by using this TJ, submit a Vehicle Report. When submitting a Vehicle Report for a condition described in this TJ, use concern area "Vehicle Report and sub concern area "Support Needed" with function group 2100.

SERVICE:

Replace piston ring kit and attach engine oil sticker according to attached instruction.

Change engine oil to fully synthetic engine oil, viscosity SAE 5W-30, quality ACEA A5/B5. This will be the requirement for the rest of the life of this vehicle.

Attached file, "Oil specifications_US_MY12_150122", must be printed and Owners Manual updated. Make the customer aware of the change to a full synthetic oil requirement.

To view TJ attachment continue to next page. This TJ has two attachments.

Page 2 of 14 2015-02-05



Volvo Car Customer Service

TJ Instruction 29871

Title	Piston rings	Page	1 (10)
Action	Replacement	Operation number:	98547-2

Issue	Date	Reason
1	2015-01	First issue

Affected vehicles

Model year	Model	Engine	Chassis
2012	S60 (11-)	B5254T5	017819-170117

Materials

Materials	Qty.	Part No.	Notes	
Engine oil	0.1		See VIDA for quantity	
Abrasive cloth	1	9511024		
Isopropanol	0.21	31375638	Consumable;	
Chemical gasket	0.5	1161059		
Piston ring kit	5.0	30750667		
Screw	10.0	9497858		
Decal	1.0	31416624		

Special tools

Description	Part No.
Holder (remov.piston/connecting rod) B 200-B 6304	999 5746
Guide pin	999 7273
Roller (Applying liquid gasket) B234,5234,6304	951 2767

Equipment

Designation	Part No.
Piston ring pliers	
Piston ring compressor	

TJ Instruction 29871 Page 2 (10)

Removal

Note! Removal steps in this procedure may contain installation details.

Remove the cylinder head, refer to:

Removal, replacement and installation

2 - Engine with mountings and equipment

21 - Engine

211 - cylinder head


Drain engine oil, refer to:

Removal, replacement and installation

2 - Engine with mountings and equipment

22 - Lubricating and oil system


220 - general

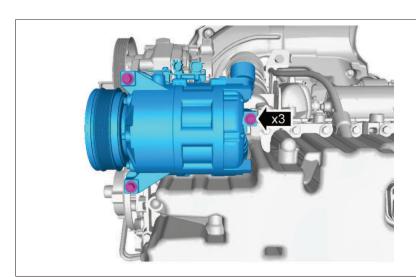

Remove the screws.

Torque:

M8, 24 Nm

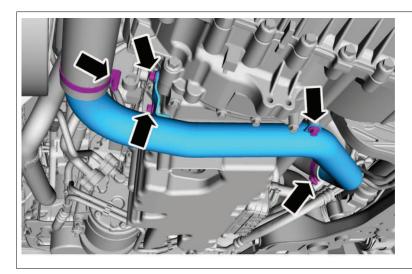


Remove the screws.

Torque:

M7, 17 Nm


TJ Instruction 29871 Page 3 (10)

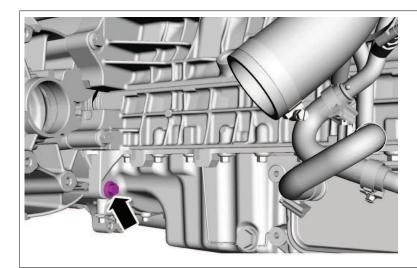

Remove the screw.

Torque:


M10, 50 Nm

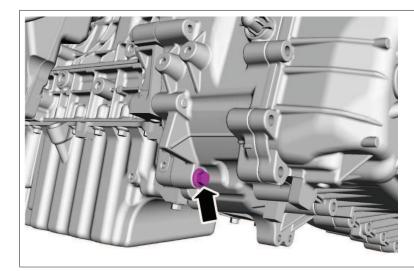

Remove the screw.

Torque:

M10, 50 Nm

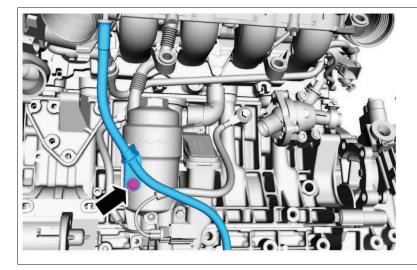


Remove the screw.

Torque:

M6, 10 Nm


TJ Instruction 29871 Page 4 (10)

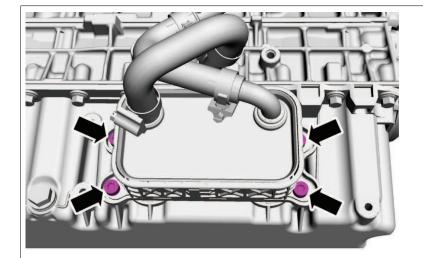


Remove the screws.

Torque:

M7 , 17 Nm

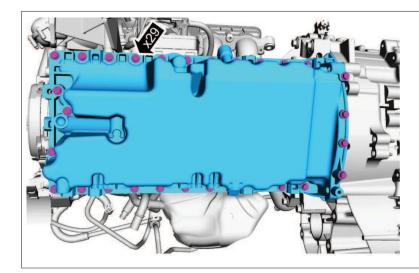


Remove the screws.

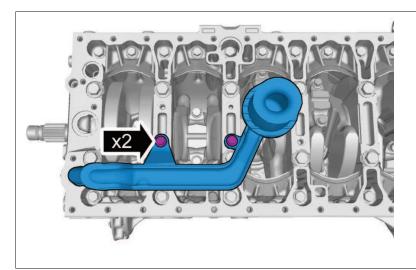

Remove the screws.


TJ Instruction 29871 Page 5 (10)

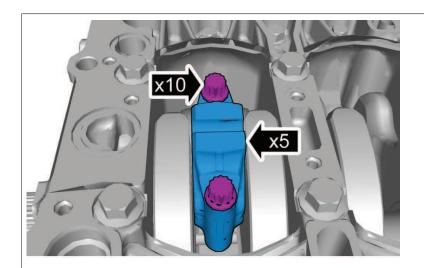

Caution! Note the position of the bearing caps in relation to the rotation of the crankshaft. The bearing caps are not interchangeable.

Caution! Note the position of the components before removal.

Remove the screws.

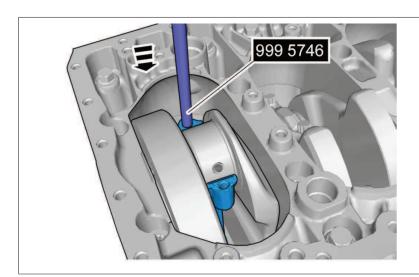


Caution! Take extra care when handling the components.

Caution! Take extra care not to damage the bearings.

Special Tool: T9995746, Holder (remov.piston/connecting rod) B 200-B 6304

Installation

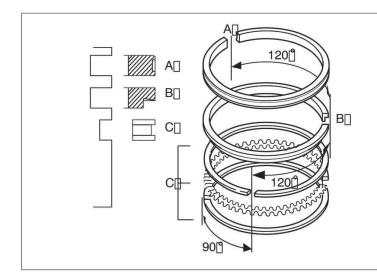


Note! Make sure that the component is clean and free of foreign material.


Note! The text on piston ring A must be face up.

Note! Make sure that new components are installed.

Use: Piston ring pliers

TJ Instruction 29871 Page 6 (10)

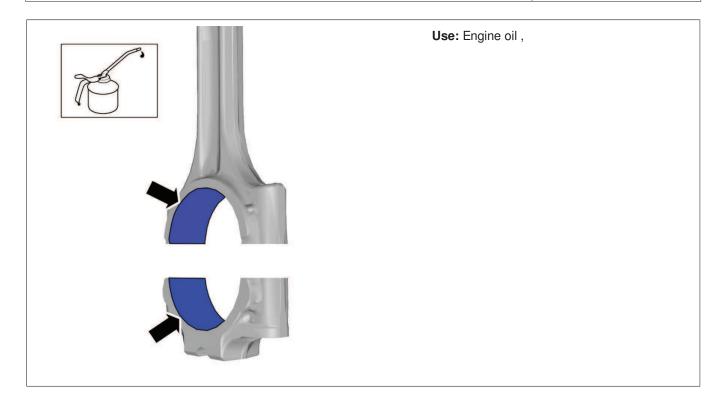

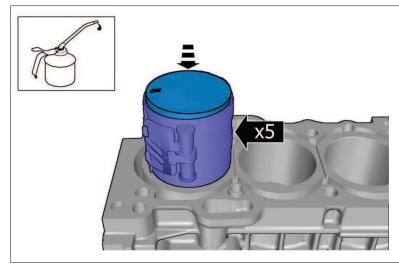


Note! Make sure that the direction arrow points towards the front of the engine.

Use: Piston ring compressor


Use: Engine oil ,

TJ Instruction 29871 Page 7 (10)

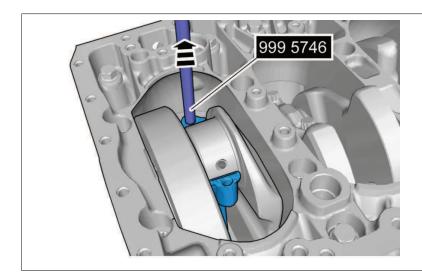

Caution! Take extra care not to damage the bearings.


Special Tool: T9995746, Holder (remov.piston/connecting rod) B 200-B 6304

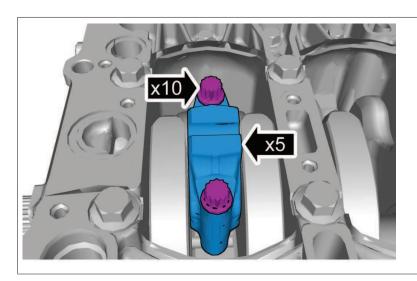

Caution! Make sure that the components are positioned correctly.


Torque:

Stage 1 : Cap connecting rod , 30 Nm
Stage 2 : Cap connecting rod , 90°

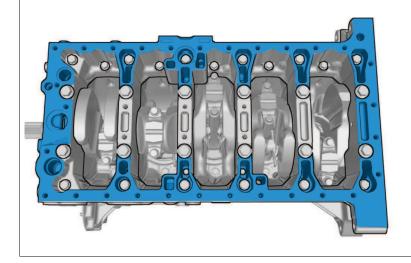


Caution! Make sure that the mating faces are clean and free of foreign material.

Use: Abrasive cloth , 9511024 **Use:** Isopropanol , 31375638 TJ Instruction 29871 Page 8 (10)

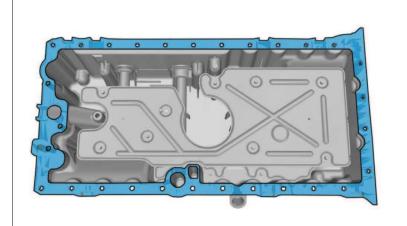

Caution! Make sure that the mating faces are clean and free of foreign material.


Use: Abrasive cloth , 9511024 **Use:** Isopropanol , 31375638

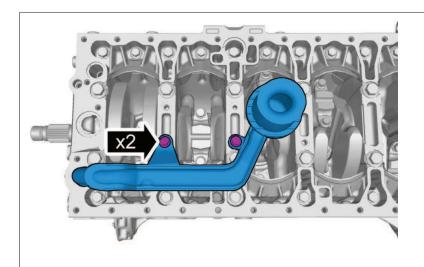

Install the screws.


Torque:

M7 , 17 Nm

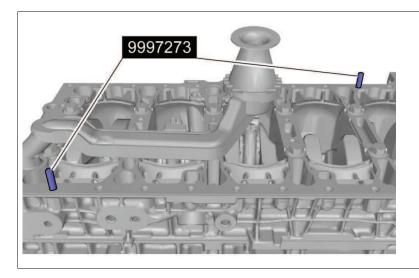


Special Tool: T9997273, Guide pin

TJ Instruction 29871 Page 9 (10)

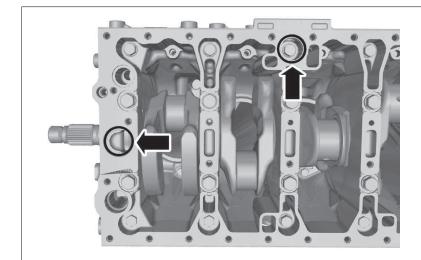

Caution! Make sure that the gaskets are correctly located.

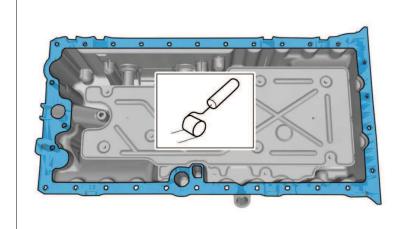


Note! The component must be installed within 5 minutes of applying the sealant.

Special Tool: T9512767, Roller (Applying liquid

gasket) B234,5234,6304

Use: Chemical gasket, 1161059

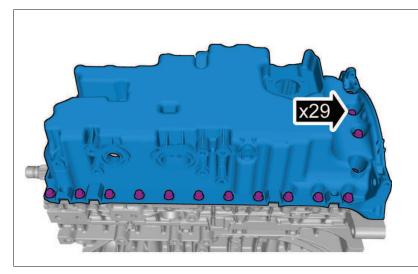

Torque:

M7, 17 Nm

To install, reverse the removal procedure.

TJ Instruction 29871 Page 10 (10)

Top up the engine oil, refer to:

Removal, replacement and installation

2 - Engine with mountings and equipment

22 - Lubricating and oil system

220 - general


Install cylinder head, refer to:

Removal, replacement and installation

2 - Engine with mountings and equipment

21 - Engine

211 - cylinder head

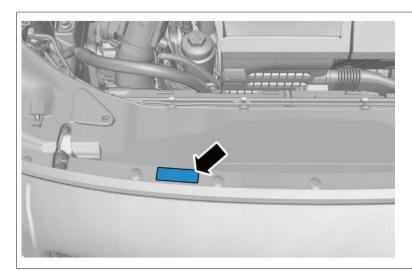

Caution! Make sure that the area around the component is clean and free of foreign material.

Use: Isopropanol, 31375638

Fit the decal.

09 Specifications



Specifications

Specification/Model	Т5
Torque (Nm/rps)	360/30-67
Torque (ft. lbs./rpm)	266/1800-4000
No. of cylinders	5
Bore (in/mm)	3.27/83
Stroke (in/mm)	3.67/93.2
Displacement	2.52 liters / (153.8 cu. in.)
Compression ratio	9.0:1

Oil specifications

Full synthetic engine oil meeting the minimum ACEA A5/B5 must be used. Lower quality oils may not offer the same fuel economy, engine performance, or engine protection.

Volvo recommends:



Refer to the warranty and Service Records information booklet for information on oilchange intervals and oil type requirements.



This vehicle comes from the factory with synthetic oil.


Oil additives must not be used.

Oil viscosity

Incorrect viscosity oil can shorten engine life under normal use. SAE 5W-30 will provide

cifications

ions

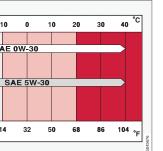

Extreme engine operation

SAE 0W-30 oil meeting ACEA A5/B5 requirements is recommended for extreme driving conditions.

lel		Volume (incl. filter)
	B5254T5	6.02 US qts (5.7 liters)